 


## Terminal Guide

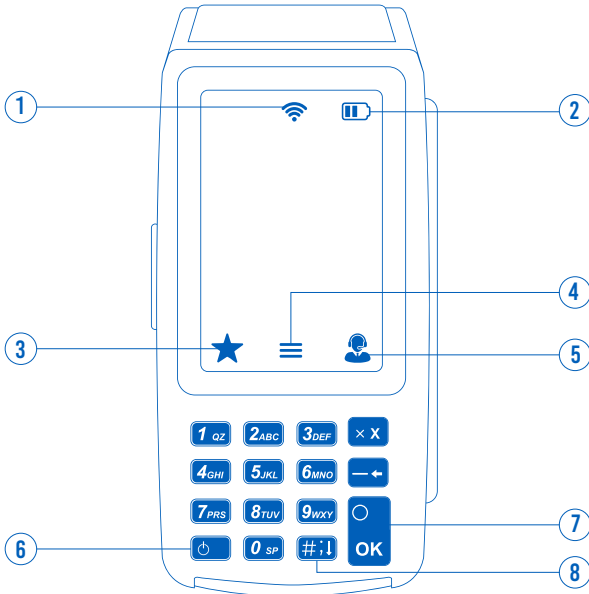

- |                              |                              |
|------------------------------|------------------------------|
| 1 Connection Icon            | 6 Power / Paper Feed         |
| 2 Battery Level (VL110 Only) | •Hold to power down terminal |
| 3 Favorites Icon             | •Press to feed paper         |
| 4 Main Menu                  | 7 Enter / Confirm Selection  |
| 5 Contact Support            | 8 Main Menu on Keypad        |

## Visit Our Knowledge Base



Scan the above QR Code with your mobile device to search for troubleshooting articles.



THE FUTURE OF PAYMENT TECHNOLOGY



# Quick Reference Guide

(VL100 & VL110)

## Favorites Menu

### ★ 1 Reprint Receipt

Prints the receipt for last transaction performed.

### ★ 2 Settlement

Option for you to settle their current batch.

### ★ 3 Tip Adjust

Adjust the tip amount on transactions performed within current batch.

### ★ 4 Reports

See summary reports for current open batch, the last settled batch, and the detailed reports for the last 5 batches settled.

### ★ 5 Change Password

Set one general password **OR** create custom passwords for settlements, voids/refunds, & removing custom fee.

### ★ 6 Download Package

Used to apply parameter changes or update the version on the device.

### ★ 7 Comm Config

Configure or change your internet connection type

### ★ 8 Reboot

Power cycles device.

### ★ 9 Remote Diagnostics

Allows ISO to perform troubleshooting on the device.

## Connect to WiFi

- From the Home Screen, tap **★ 7 Comm Config**
- From the Configuration Menu Tap **Comm Config**
- Tap **WiFi**
- Tap **SSID** (WiFi Name)
- Tap **Configure**
- Enter **WiFi Password**  
*WiFi password is case sensitive*
- Tap **OK** to confirm WiFi password
- Tap **Cancel** to revert to previous screen
- Tap **Connect**

**To quickly swap internet connection types, tap the Connection icon and select the desired connection type (see terminal guide on last page). The current connection type will be highlighted green.**

## Transactions

### Credit Sale

- Enter **transaction amount** and press **OK**.
- **Swipe/Insert/Tap** card on **Present Card** screen or start typing card number for **manual entry**.
- **Sign** and **Tip** if prompted.
- Select receipt delivery method

### Debit Sale

- Tap **Credit** until **Debit** is displayed.
- Enter **transaction amount** and press **OK**.
- **Swipe/Insert/Tap** card on **Present Card** screen or start typing card number for **manual entry**.
- Enter **PIN** number and **Tip** if prompted
- Follow prompts until receipt prompt - select receipt delivery method.

### Credit Void

- Tap **Sale** until **Void** is displayed. Press **OK** and enter password.
- Select **Tran Number** or **Card Number**.
  - If **Tran Number**, enter transaction number. If **Card Number**, enter last 4 digits of card.
- Transaction will appear on screen. Press **OK** to void transaction.
- Select receipt delivery method.

### Credit Refund

- Tap **Sale** until **Refund** is displayed. Enter Refund amount and press **OK**.
- Enter password if prompted.
- **Swipe/Insert/Tap** card on **Present Card** screen or start typing card number for **manual entry**.
- Select receipt delivery method.

### Credit PreAuth

- Tap **Sale** until **PreAuth** is displayed. Enter dollar amount and press **OK**.
- **Swipe/Insert/Tap** card on **Present Card** screen or start typing card number for manual entry.
- Select receipt delivery method.

### Capture PreAuth (Credit)

- Tap **Sale** until **Ticket** is displayed. Enter dollar amount, press **OK** and enter password.
- Select **Tran Number** or **Card Number** based on information you have.
  - If **Tran Number**, enter transaction number. If **Card Number**, enter last 4 digits of card.
- **Sign** and **Tip** if prompted.
- Select receipt delivery method.

### Pre-Sale Ticket

- Tap the **Main Menu** icon ☰ tap the **Page Down** icon ↓ and select **Host Utility**.
- Enter the password and select **Pre-Sale Ticket**.
- Enter **dollar amount**, press the **OK** button and the pre-sale ticket will be printed.

**Default password is last 4 digits of the EPI**